DDC POINTS LIST DESCRIPTION DEVICE INPUTS OUTPUTS ALARMS REMARKS ANALOG | DIGITAL | ANALOG | DIGITAL | ANALOG | DIGITAL AIR HANDLING UNITS AHU-2, AHU-3 SUPPLY FAN VFD START/STOP CR Χ SUPPLY FAN VFD SPEED CONTROL AUX Χ CS SUPPLY FAN VFD STATUS Χ Χ SUPPLY FAN VFD ALARM AUX Χ Χ SUPPLY AIR TEMP Χ SUPPLY AIRFLOW (CFM) Χ SUPPLY AIR DUCT STATIC PRESSURE DPS Χ Χ TCV CHILLED WATER CONTROL VALVE HEATING WATER CONTROL VALVE TCV DPS PRE-FILTER STATUS Χ FINAL FILTER STATUS DPS Χ Χ FPT FREEZE PROTECTION THERMOSTAT Χ Χ SUPPLY AIR TEMP - DOWNSTREAM HRC TS SUPPLY AIR TEMP - DOWNSTREAM HC TS Χ TCV HEAT RECOVERY CONTROL VALVE TS HEAT RECOVERY WATER SUPPLY TEMP Χ Χ HEAT RECOVERY WATER RETURN TEMP TS Χ Χ FREEZE PROTECTION THERMOSTAT FPT Χ Χ HEATING COIL CIRCULATION PUMP START/STOP CR CS HEATING COIL CIRCULATION PUMP STATUS Χ SUPPLY FAN HIGH STATIC PRESSURE SHUTDOWN DPH Χ Χ SMOKE DETECTOR (BY DIVISION 16) SD Χ OUTSIDE AIR DAMPER MOD OUTSIDE AIR DAMPER POSITION ES Χ Χ AHU-1, AHU-4 SUPPLY FAN VFD START/STOP CR SUPPLY FAN VFD SPEED CONTROL AUX SUPPLY FAN VFD STATUS CS Χ SUPPLY FAN VFD ALARM AUX FAIL Χ TS SUPPLY AIR TEMPERATURE TS MIXED AIR TEMPERATURE Χ Χ SUPPLY AIR DUCT STATIC PRESSURE DPS Χ Х SUPPLY AIRFLOW (CFM) AMU Χ Χ OUTSIDE AIR DAMPER POSITION OUTSIDE AIR , AIRFLOW (CFM) Χ CHILLED WATER COIL VALVE TCV Χ TCV HEATING WATER COIL VALVE PRE-FILTER STATUS DP DIRTY FINAL FILTER STATUS DP DIRTY Χ SUPPLY AIR DUCT SMOKE DETECTOR SD DIFFERENTIAL PRESSURE (LOW) DPL DIFFERENTIAL PRESSURE (HIGH) LO TEMP FREEZE PROTECTION THERMOSTAT REF-1, REF-4 RETURN FAN VFD START/STOP CR RETURN FAN VFD SPEED CONTROL AUX RETURN FAN VFD STATUS CS RETURN FAN VFD ALARM AUX FAIL RETURN AIR TEMPERATURE TS RETURN AIRFLOW (CFM) EXHAUST AIR DAMPER POSITION RETURN AIR DAMPER POSITION RETURN AIR DUCT SMOKE DETECTOR SD EF-2, EF-3 EXHAUST FAN VFD START/STOP CR EXHAUST FAN VFD SPEED CONTROL AUX EXHAUST FAN VFD STATUS CS AUX EXHAUST FAN VFD ALARM DPS EXHAUST AIR DUCT STATIC PRESSURE EXHAUST FILTER STATUS DPS EXHAUST INTAKE TEMP TS Χ EXHAUST AIRFLOW (CFM) Χ Χ EXHAUST DISCHARGE TEMP TS Χ HEAT RECOVERY WATER SUPPLY TEMP TS Χ HEAT RECOVERY WATER RETURN TEMP TS Χ Χ SUPPLY FAN VFD START/STOP CR SUPPLY FAN VFD SPEED CONTROL AUX CS SUPPLY FAN VFD STATUS SUPPLY FAN VFD ALARM AUX FAIL SUPPLY AIR TEMPERATURE TS Χ FREEZE PROTECTION THERMOSTAT FPT SUPPLY AIR DUCT STATIC PRESSURE DPS SUPPLY AIRFLOW (CFM) AMU OUTSIDE AIR DAMPER POSITION OUTSIDE AIR , AIRFLOW (CFM) AMU Χ Χ CHILLED WATER COIL VALVE TCV Χ HEATING WATER COIL VALVE TCV Χ DP PRE-FILTER STATUS DIRTY SUPPLY AIR DUCT SMOKE DETECTOR SD Χ DIFFERENTIAL PRESSURE (LOW) DPL DIFFERENTIAL PRESSURE (HIGH) FREEZE PROTECTION THERMOSTAT FPT LO TEMP EXHAUST FAN VFD START/STOP CR Χ EXHAUST FAN VFD SPEED CONTROL AUX CS EXHAUST FAN VFD STATUS EXHAUST FAN VFD ALARM AUX · EXHAUST AIR DUCT STATIC PRESSURE EXHAUST AIRFLOW (CFM) REFRIGERANT LEAK DETECTION SYSTEM REFRIGERANT MONITORING AUX X AHU-9 SUPPLY FAN VFD START/STOP CR Χ SUPPLY FAN VFD SPEED CONTROL AUX SUPPLY FAN VFD STATUS CS SUPPLY FAN VFD ALARM AUX FAIL

| DESCRIPTION  | DEVICE     | INPUTS   | T                                     | OUTPUTS                               |   | ALARMS   |   | REMARKS  |
|--|------------|----------|---------------------------------------|---------------------------------------|---|----------|---|--|
| SUPPLY AIR TEMPERATURE   | TS         | ANALOG X | DIGITAL                               | ANALOG                                | DIGITAL                                 | ANALOG   | DIGITAL<br>X                            |  |
| FREEZE PROTECTION THERMOSTAT   | FPT        |          | X                                     |                                       |   | X        |   |  |
| SUPPLY AIR DUCT STATIC PRESSURE  | DPS        | X        |                                       | X                                     |   | X        |   |  |
| SUPPLY AIRFLOW (CFM)   | AMU        | X        |                                       | X                                     |   | X        |   |  |
| CHILLED WATER COIL VALVE PRE-FILTER STATUS   | TCV<br>DP  |          | X                                     | X                                     |   |          | DIRTY                                   |  |
| SUPPLY AIR DUCT SMOKE DETECTOR   | SD         |          | X                                     |                                       |   |          | X                                       |  |
| RETURN AIR DAMPER POSITION   | MOD        |          |                                       | X                                     |   |          |   |  |
| OUTSIDE AIR DAMPER POSITION SUPPLY AIR TEMPERATURE—ELEC RM 5007  | MOD<br>TS  |          |                                       | X                                     |   |          |   | ,  |
| SUPPLY AIR TEMPERATURE—ELEC RM 5007  SUPPLY AIR TEMPERATURE—ELEC RM 5009                                       | TS         | X        |                                       |                                       | X                                       | X        |   |  |
| REF-8  |            |          |                                       |                                       |   |          |   |  |
| RETURN FAN VFD START/STOP  | CR         |          |                                       |                                       | Х                                       |          |   |  |
| RETURN FAN VFD SPEED CONTROL   | AUX        |          |                                       | X                                     |   |          |   |  |
| RETURN FAN VFD STATUS RETURN FAN VFD ALARM   | CS         |          | X                                     |                                       |   | X        |   |  |
| RETURN AIR DUCT STATIC PRESSURE  | DPS        | X        | \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ |                                       |   | X        |   |  |
| RELIEF/EXHAUST AIR DAMPER POSITION   | MOD        |          |                                       | X                                     |   |          |   |  |
| HU-8, AHU-11, AHU-12   |            |          |                                       |                                       |   |          |   |  |
| SUPPLY FAN VFD START/STOP SUPPLY FAN VFD SPEED CONTROL   | CR<br>AUX  |          |                                       | X                                     | Χ.                                      |          |   |  |
| SUPPLY FAN VFD STATUS  | CS         |          | X                                     | \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ |   |          |   |  |
| SUPPLY FAN VFD ALARM   | AUX        |          | X                                     |                                       |   |          | FAIL                                    |  |
| SUPPLY AIR TEMPERATURE   | TS         | X        |                                       |                                       |   |          | X                                       |  |
| SUPPLY AIR DUCT STATIC PRESSURE  | DPS        | X        |                                       | X                                     |   | X        |   |  |
| SUPPLY AIRFLOW (CFM)  CHILLED WATER COIL VALVE   | TCV        | X        |                                       | X                                     | *************************************** | X        | *************************************** |  |
| PRE-FILTER STATUS  | DP         |          | X                                     | ^                                     |   |          | DIRTY                                   |  |
| SUPPLY AIR DUCT SMOKE DETECTOR   | SD         |          | X                                     |                                       |   |          | X                                       |  |
| SUPPLY AIR TEMPERATURE   | TS         | X        |                                       |                                       | Χ                                       | X        |   |  |
| ENERAL EXHAUST: EF-1, EF-4A, EF-4B   | <u> </u>   |          |                                       |                                       | V                                       |          |   |  |
| EXHAUST FAN START/STOP  EXHAUST FAN STATUS   | CR<br>CS   |          | X                                     |                                       | X                                       | X        |   |  |
| EXHAUST FAN ALARM  | AUX        |          | X                                     |                                       |   | X        |   |  |
| EXHAUST AIR DUCT STATIC PRESSURE   | DPS        | X        |                                       |                                       |   | X        |   |  |
| OLATION ROOM EXHAUST: EF-9, EF-10  | ~~         |          |                                       |                                       |   |          |   |  |
| EXHAUST FAN VFD START/STOP  EXHAUST FAN VFD SPEED CONTROL  | CR<br>AUX  |          |                                       | X                                     | X                                       |          |   |  |
| EXHAUST FAN VFD STATUS   | CS         |          | X                                     | ^                                     |   | X        |   |  |
| EXHAUST FAN VFD ALARM  | AUX        | ,        | X                                     |                                       |   | X        | ••••••••••••••••••••••••••••••          |  |
| EXHAUST AIR DUCT STATIC PRESSURE   | DPS        | X        |                                       |                                       |   | X        |   |  |
| HARMACY FUME HOOD EXHAUST: EF-11   |            |          |                                       |                                       |   |          |   |  |
| EXHAUST FAN VFD START/STOP  EXHAUST FAN VFD SPEED CONTROL  | CR<br>AUX  |          |                                       | X                                     | X                                       |          |   |  |
| EXHAUST FAN VFD STATUS   | CS         | •        | X                                     | ^                                     |   | X        |   |  |
| EXHAUST FAN VFD ALARM  | AUX        |          | X                                     |                                       |   | X        |   |  |
| EXHAUST AIR DUCT STATIC PRESSURE   | DPS        | X        |                                       |                                       |   | X        |   |  |
| HOOD FILTER STATUS   | DP         |          | X                                     |                                       |   |          | DIRTY                                   |  |
| RESSURIZATION FANS: PSF-1, PSF-2, PSF-3 EXHAUST FAN VFD START/STOP   | CR         |          |                                       |                                       | X                                       |          |   | SIGNAL FROM FIRE ALARM SYSTEM                    |
| EXHAUST FAN VFD SPEED CONTROL  | AUX        |          |                                       | X                                     |   |          |   |  |
| EXHAUST FAN VFD STATUS   | CS         |          | X                                     |                                       |   | X        |   |  |
| EXHAUST FAN VFD ALARM  | AUX        |          | X                                     |                                       |   | X        |   |  |
| EXHAUST AIR DUCT STATIC PRESSURE  ARAGE EXHAUST: GEF-1   | DPS        | X        |                                       |                                       |   | X        | ·                                       |  |
| EXHAUST FAN VFD START/STOP   | CR         |          |                                       | ,                                     | Χ                                       |          |   |  |
| EXHAUST FAN VFD SPEED CONTROL  | AUX        |          |                                       | X                                     |   |          |   | INTERLOCKED WITH CO SYSTEM                       |
| EXHAUST FAN VFD STATUS   | CS         |          | X                                     |                                       |   | X        |   |  |
| EXHAUST FAN VFD ALARM  EXHAUST AIR DUCT STATIC PRESSURE  | AUX<br>DPS | X        | X                                     |                                       |   | X        |   |  |
| ARBON MONOXIDE MONITORING SYSTEM   | ריים       | ^        |                                       |                                       |   | ^        |   |  |
| CO SENSORS/MONITORING PANEL  | AUX        | X        |                                       |                                       |   | X        |   |  |
| ONSTANT VOLUME AIR TERMINALS   |            |          |                                       |                                       |   |          |   |  |
| PRIMARY AIR DAMPER   | MOD        |          |                                       |                                       | X                                       |          |   |  |
| HEATING WATER COIL VALVE PRIMARY AIRFLOW (CFM)   | TCV<br>DPS | X        |                                       |                                       | X                                       | X        |   |  |
| SPACE TEMPERATURE  | T          | X        |                                       |                                       |   | X        |   |  |
| SUPPLY AIR TEMPERATURE   | TS         | X        |                                       |                                       | X                                       | X        |   |  |
| OLATION ROOMS-ANTE AND EXAM  |            |          |                                       |                                       |   |          |   | EVAL DOOL TO CORDINATE                           |
| ROOM PRESSURE MONITOR  ROOM PRESSURE MONITOR   | DPS<br>DPS | X        |                                       |                                       | · · · · · · · · · · · · · · · · · · ·   | X        |   | EXAM ROOM TO CORRIDOR  PATIENT ROOM TO ANTE ROOM |
| HARM ANTE ROOM 4042  | טרט        |          |                                       |                                       |   | ^        |   | TATENT NOOM TO ANTE KOOM                         |
| ROOM PRESSURE MONITOR  | DPS        | X        |                                       |                                       |   | X        |   |  |
| HARM CHEMO 4044  |            |          |                                       |                                       |   |          |   |  |
| SPACE HUMIDITY   | T          | X        | \ <u>\</u>                            |                                       |   | X        |   |  |
| SPACE HUMIDITY ROOM PRESSURE MONITOR   | DPS        | X        | X                                     |                                       |   | X        |   |  |
| HARM CLEAN 4043  | ט וע       | + ^      |                                       |                                       |   | ^        |   |  |
| SPACE TEMP   | T          | X        |                                       |                                       |   | X        |   |  |
| SPACE HUMIDITY   | Н          |          | X                                     |                                       |   | X        |   |  |
| ROOM PRESSURE MONITOR  NIT HEATERS: UH-1, UH-2, UH-3, UH-4   | DPS        | X        |                                       |                                       |   | X        |   |  |
| FAN START/STOP   | CR         |          |                                       |                                       | X                                       |          |   |  |
| FAN STATUS   | CS         | X        |                                       |                                       |   |          |   |  |
| HEATING WATER COIL VALVE   | TCV        |          |                                       | ,                                     | X                                       |          |   |  |
| SDACE TEMPERATURE  | T          | X        |                                       |                                       |   | X        |   |  |
| SPACE TEMPERATURE  | Т          | - Y      |                                       |                                       |   | Y        |   | HIGH TEMPERATURE ALARM                           |
| DOFTOP AC UNIT: RTU-1  | I .        |          | X                                     |                                       |   | ^        |   | THOSE TENNI ENATIONE ALARINI                     |
| SPACE TEMPERATURE  | AUX        | 1        |                                       | 4                                     |   |          | X                                       | UNIT GENERAL ALARM                               |
| DOFTOP AC UNIT: RTU-1  | AUX<br>AUX |          | X                                     |                                       |   | <u> </u> |   |  |
| OOFTOP AC UNIT: RTU-1  SPACE TEMPERATURE  UNIT ENABLE/DISABLE  UNIT STATUS  R CONDITIONING UNITS-SPLIT SYSTEMS | ····       |          | X                                     |                                       |   |          |   |  |
| SPACE TEMPERATURE UNIT ENABLE/DISABLE  | ····       | X        | X                                     |                                       |   | X        |   | HIGH TEMPERATURE ALARM                           |
|  | T          | X        | X                                     |                                       |   |          | X                                       |  |

DDC POINTS LIST

GIFFIN • BOLTE • JURGENS p.c.

815 S.W. SECOND AVENUE · PORTLAND, OREGON 97204 (503) 223-0992 www.gbjarch.com FAX (503) 294-3961

CDIENGINEERS 4200 - 194th St SW, Suite 200 Lynnwood, WA 98036 T 425.672.1071 F 425.778.8769 www.CDIENGINEERS.com

EXPIRES 06-30-10

MultiCare 🕰 **EMERGENCY DEPARTMENT & CANCER CENTER EXPANSION** 

TACOMA, WASHINGTON

09-26-2008 NONE Drawn By

DDC POINTS LIST

CDi

03