


3RD FLOOR PLAN - SOUTH - PLUMBING  
SCALE: 1/8"=1'-0"

- KEY NOTES:**
- ① 4"W DOWN.
  - ② 2"W DOWN.
  - ③ 2"V DOWN.
  - ④ 4"W UP.
  - ⑤ 2"W UP.
  - ⑥ 2"V UP.
  - ⑦ 6"RWL DOWN, 19,340#.
  - ⑧ 6"ORWL DOWN, 19,340#.
  - ⑨ 2"W UP TO [D2].
  - ⑩ 4"V DOWN.
  - ⑪ 4"VTR.
  - ⑫ 3" UP TO [RD1].
  - ⑬ 3" UP TO [OD1].
  - ⑭ 1/2"HWC DOWN TO HOT WATER CONNECTION AT MIXING VALVE.
  - ⑮ 2"CW DOWN TO WATERCLOSETS.
  - ⑯ PROVIDE 1/2" TRAP PRIMER ABOVE ACCESSIBLE CEILING AND PROVIDE 1/2"LLCW DOWN TO [D1].

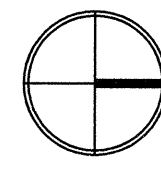

GIFFIN • BOLTE • JURGENS  
ARCHITECTS  
815 S.W. SECOND AVENUE • PORTLAND, OREGON 97204  
(503) 223-0992 www.gbjarch.com FAX (503) 294-3961

CDI ENGINEERS  
4200 - 184th St SW, Suite 200  
Lynnwood, WA 98036  
T 425.672.1071 F 425.778.8769  
www.CDIENGINEERS.com



MultiCare  
EMERGENCY DEPARTMENT & CANCER CENTER EXPANSION  
TACOMA, WASHINGTON

Date 09-26-2008  
Scale 1/8"=1'-0"  
Drawn By CDI  
Job No. 4034

3RD FLOOR  
PLAN - SOUTH -  
PLUMBING

M2  
03