


N: B13608 (CAUD-05) 401.E4-11.DWG DEC 18, 2008 - 11:42:33 AM BY: JULIO

GIFFIN • BOLTE • JURGENS
ARCHITECTS

815 S.W. SECOND AVENUE • PORTLAND, OREGON 97204
(503) 223-0992 www.gbjaarch.com FAX (503) 294-3961

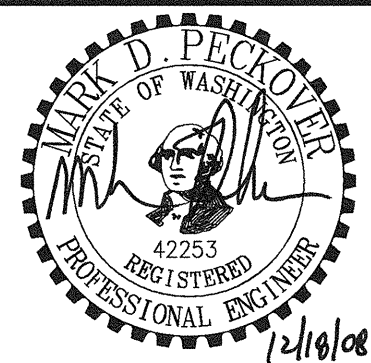

MultiCare
EMERGENCY DEPARTMENT & CANCER CENTER EXPANSION

TACOMA, WASHINGTON

100% CD SET 9/26/08
CCD #4 12/17/08

Date 09-26-2008
Scale AS INDICATED
Drawn By JL
Job No. 4034

FIRST FLOOR
PLAN - NORTH
SYSTEMS

E4
11

GENERAL NOTES

1. SEE ARCHITECTURAL PLANS, SECTIONS AND ELEVATIONS FOR EXACT EQUIPMENT AND DEVICE LOCATIONS.
2. SEE ARCHITECTURAL PLANS FOR LOCATIONS OF SOUND, SMOKE AND FIRE RATED WALLS.
3. REFER TO MECHANICAL DRAWINGS FOR FIRE/SMOKE DAMPER LOCATIONS. PROVIDE FIRE ALARM MONITORING POINT FOR EACH FIRE/SMOKE DAMPER.
4. CONTRACTOR SHALL OBTAIN THE FINAL OWNER APPROVED HILLROM NURSE CALL SHOP DRAWINGS PRIOR TO ROUGH-IN.

FLAG NOTES

- PROVIDE (8) 3.5" X 3.5" SQUARE EZ PATH DEVICES THROUGH FIRST FLOOR TO SECOND FLOOR IS ROOM. PROVIDE ALL FLOOR MOUNTING ACCESSORIES TO PROVIDE A COMPLETE SYSTEM.
- PROVIDE (4) 3.5"X3.5" SQUARE EZ PATH DEVICES OR APPROVED.
- EQUIPMENT INCLUDED IN FOUNDATION PACKAGE. SEE THE FOUNDATION PACKAGE DRAWINGS FOR FURTHER INFORMATION.
- COORDINATE EXACT ROUTING THROUGH CHILLER ROOM WITH MECHANICAL DRAWINGS AND MECHANICAL CONTRACTOR PRIOR TO ROUGH-IN.
- COORDINATE EXACT ROUTING THROUGH EXISTING ROOMS WITH OWNER PRIOR TO ROUGH-IN.
- STUB INTO MDF AS SHOWN. COORDINATE EXACT LOCATION WITH OWNER PRIOR TO ROUGH-IN.
- PROVIDE DUCT DETECTOR FOR SF-1. COORDINATE WITH MECHANICAL CONTRACTOR PRIOR TO ROUGH-IN.
- PUSH BUTTON FOR AUTO DOOR OPERATOR. COORDINATE WITH ARCHITECT PRIOR TO ROUGH-IN.

1 FIRST FLOOR PLAN - NORTH - SYSTEMS

E4.11 SCALE: AS INDICATED

0 4 8 16 24
as indicated feet