


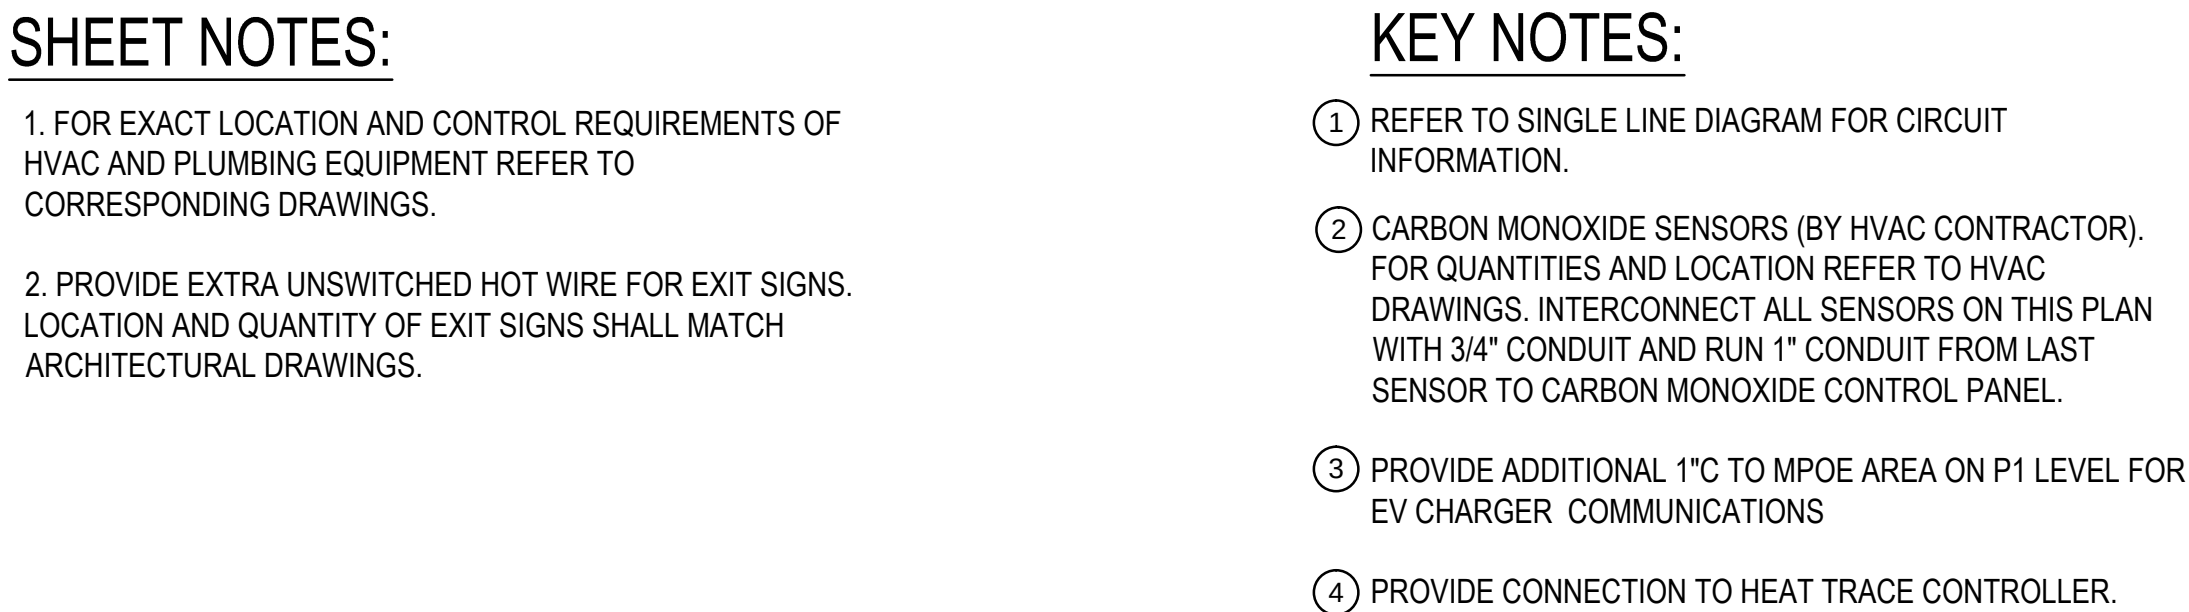

KEY NOTES:

- ① REFER TO SINGLE LINE DIAGRAM FOR CIRCUIT INFORMATION.
- ② CARBON MONOXIDE SENSORS (BY HVAC CONTRACTOR).
FOR QUANTITIES AND LOCATION REFER TO HVAC DRAWINGS. INTERCONNECT ALL SENSORS ON THIS PLAN WITH 3/4" CONDUIT AND RUN 1" CONDUIT FROM LAST SENSOR TO CARBON MONOXIDE CONTROL PANEL.
- ③ PROVIDE ADDITIONAL 1" TO MPOE AREA ON P1 LEVEL FOR EV CHARGER COMMUNICATIONS
- ④ PROVIDE CONNECTION TO HEAT TRACE CONTROLLER.